

The Classic™



TO ADJUST HEIGHT
AND TILT:
Loosen knob.
Adjust height and angle.
Tighten knob.