


EasyRiser™

TO RAISE:

Grasp sides as shown.
Move to desired height.

TO LOWER:

Grasp sides as shown.
Tip UP front.
Move to desired height.

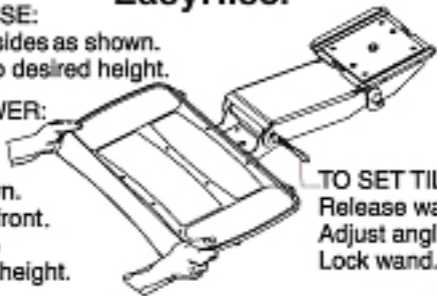

TO SET TILT:
Release wand.
Adjust angle.
Lock wand.